

Troubleshooting Guide for all Single Engine Externally Regulated Alternators

Record Aircraft	•
Bus Voltage: _	

NOTE Perform all tests with:

- 1. ALTERNATOR SWITCH on
- 2. Master Switch on
- 3. Engine off
- 4. Magnetos turned off or grounded

Additional Considerations:

- Voltage drop of .5 volts MAX at all points except across the VR.
- 2. Voltage drop of 1 to 1.5 volts across the actual regulator acceptable.
- MAX resistence of .2 ohms at ground points, across switches and conductors.
- 4. MAX of 1 volt AC at ALT B+ Terminal.
- Engine operating speeds and load requested affect output.

TECH SUPPORT

techsupport@hartzellenginetech.com +1 (334) 386-5400

