

## Part No. 10-7011

## **Installation Instructions**

- 1. Disconnect aircraft battery.
- 2. Install alternator per included drawing.
- 3. Refer to appropriate engine and airframe service manuals for belt tension and bolt torques.
- 4. Install battery wire with MS25171-2S terminal nipple on 6mm output terminal and torque to 50 in. lb.
- 5. Install ground wire to any of the three 5mm studs on rear of alternator and torque to 35 in. lb. (If aircraft is equipped with an external alternator ground.)
- 6. Install field wire with MS25171-1S terminal nipple to F1 terminal on rear of alternator and torque to 20 in. lb.
- 7. Reconnect aircraft battery.
- 8. Start aircraft and check alternator output for proper operation. Consult aircraft maintenance manual for regulated voltage parameters.

## **Maintenance Instructions**

Annual / 100 hour inspections:

1. Remove drive belt and turn alternator rotor to check condition of bearings for abnormal noise or roughness.

5 year or 1,000 hour intervals:

- 1. Repeat: Annual / 100 hour inspection.
- 2. Remove field brush assembly and inspect brushes for excess wear. Replace brush assembly if brushes extend less than .250" from edge of brush holder case.